


Installing Decorative Plaster

'how to' no.

5

...Rose Vents and Corbels

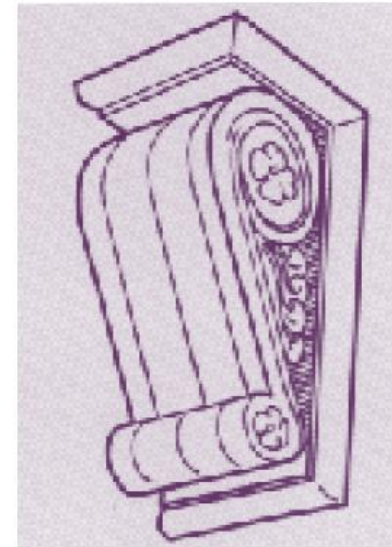

PlastaMasta

Hallam &
Mornington
Peninsula

Hallam ☎ 8794 3000


E-Mail sales@pmhallam.com.au

Mornington Peninsula ☎ 8796 4000

E-Mail sales@pmmp.com.au

www.hallam.plastamasta.com.au


www.mornington.plastamasta.com.au

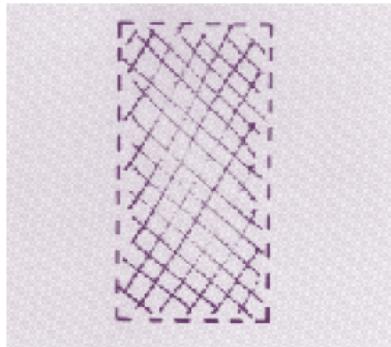

Mark position and score


MIXING

3. Place 2 cups of water into a clean bucket. Using the plastic knife, mix in 4 cups of Cornice Cement. Mix until consistency is even - similar to a cake mix.

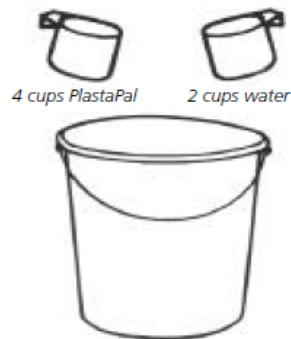


ATTACHING THE ROSE VENT OR CORBEL

4. Smear the back surface of the rose vent or corbel with a generous amount of the cornice adhesive or the cement mixture. Place in position over the ceiling or wall and apply slight pressure to push out excess plaster. This will cause a suction.

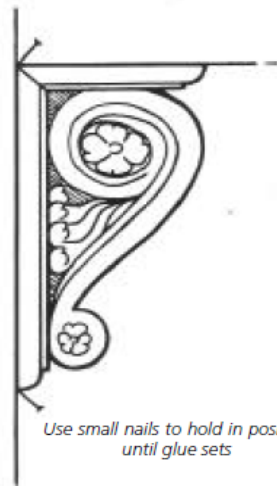

Use small nails to hold in position until glue sets


5. Small nails can be used to hold the decorative plaster until setting commences. While plaster is still wet, clean around the edges with a knife and a moist sponge. Allow 24 hours for drying.

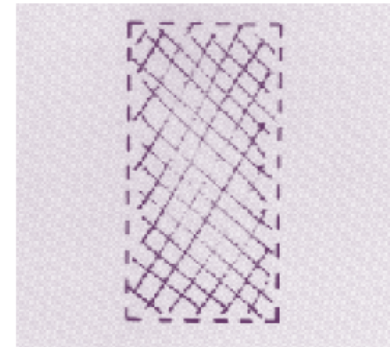

Mark position and score


MIXING

3. Place 2 cups of water into a clean bucket. Using the plastic knife, mix in 4 cups of Cornice Cement. Mix until consistency is even - similar to a cake mix.

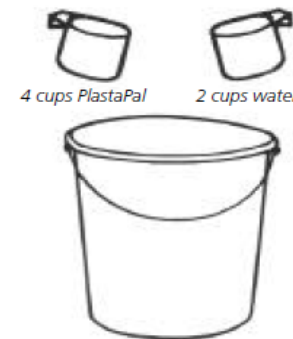

ATTACHING THE ROSE VENT OR CORBEL

4. Smear the back surface of the rose vent or corbel with a generous amount of the cornice adhesive or the cement mixture. Place in position over the ceiling or wall and apply slight pressure to push out excess plaster. This will cause a suction.

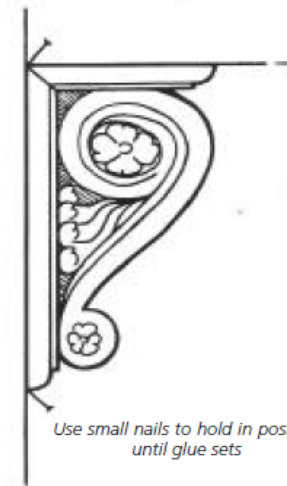

Use small nails to hold in position until glue sets

5. Small nails can be used to hold the decorative plaster until setting commences. While plaster is still wet, clean around the edges with a knife and a moist sponge. Allow 24 hours for drying.

Mixing

Mixing